

Cirrus Link Module Installation

To run Ignition with the Cirrus Link Cloud and/or MQTT Modules the following components must be installed:

- [Ignition](#)
 - Required base platform 8.xx to support the Cirrus Link Cloud and MQTT Modules.
 - MQTT Modules do not require an external database in Ignition to be configured.
- [Module Installation](#)
 - Required for Cloud and/or MQTT support in Ignition