## **Module Installation**

Cirrus Link's Ignition Modules can be downloaded from the Ignition Strategic Partner Modules download page.


The modules are built to work with specific versions of Ignition and this page shows which versions of the Cirrus Link modules are compatible with which versions of Ignition.

Inductive Automation has a short video showing how to install modules into Ignition along with specific videos for each of the MQTT Modules as well:


- Videos: Installing MQTT Distributor
- Videos: Installing MQTT EngineVideos: Installing MQTT Transmission

To install, browse to your Ignition Gateway's web UI (the default URL is: http://localhost:8088) and login, if required, using the default username / password configured by the user when the gateway was installed.


From the Ignition left side bar, click on the Config tab:

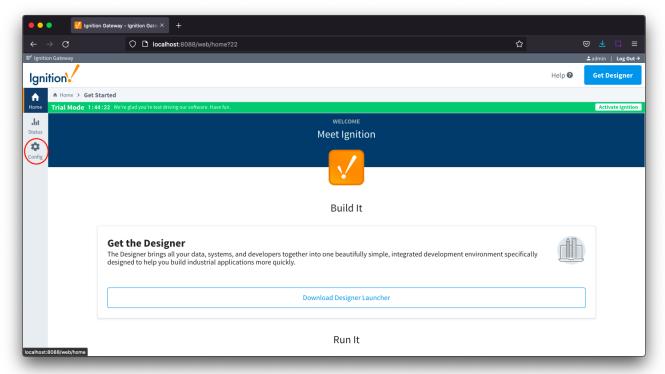


Under the SYSTEM heading click on Modules.

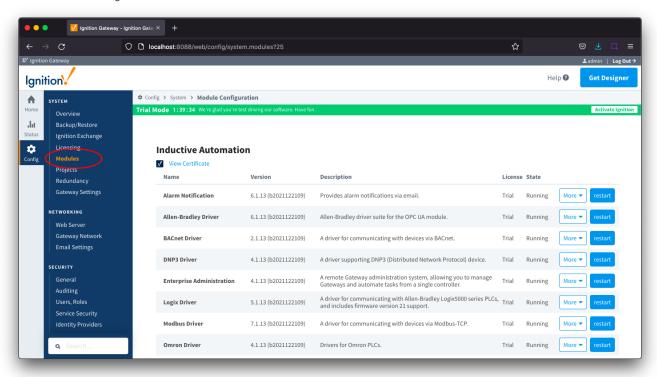


Scroll to the bottom of the page and click on the link "Install or Upgrade a Module..."

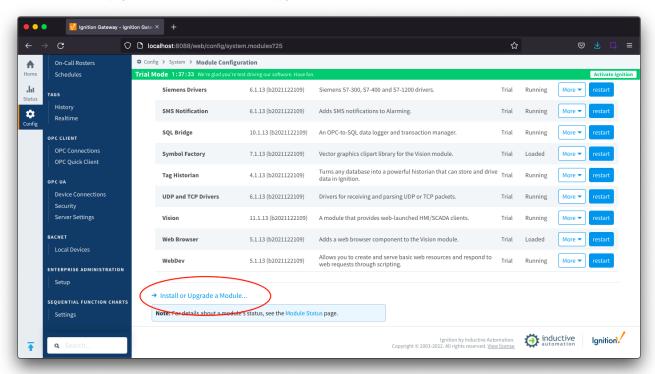


Select the 'Browse' button, browse to the MQTT Module to install and then click the Install button.

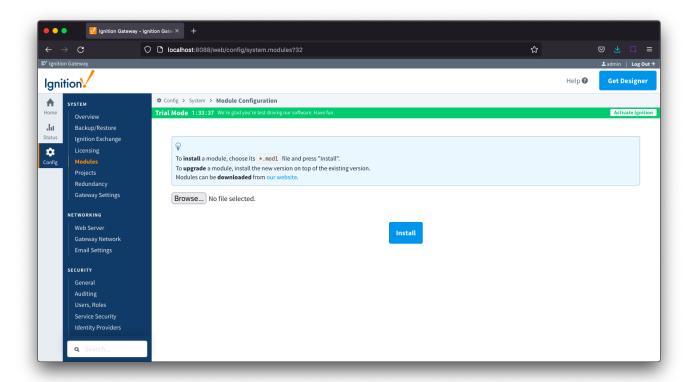


After clicking the Install button you may be asked to accept the license agreement. If you accept, click the 'I accept' check box and then click the 'Accept License' button.

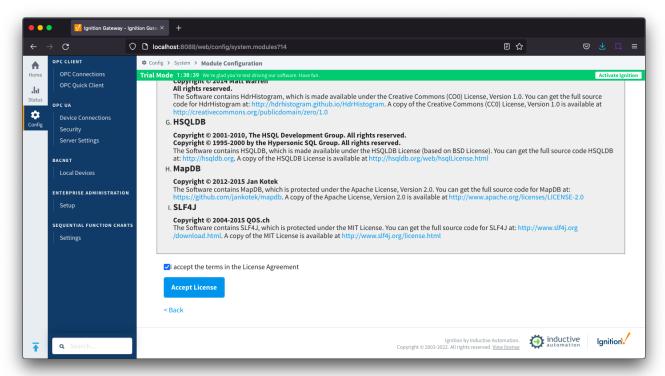

You may also be asked to add the module's trusted certificate. If so, click the 'I want to add this certificate to my trusted certificates and install the module' check box and then click the 'Add Certificate and Install Module' button.

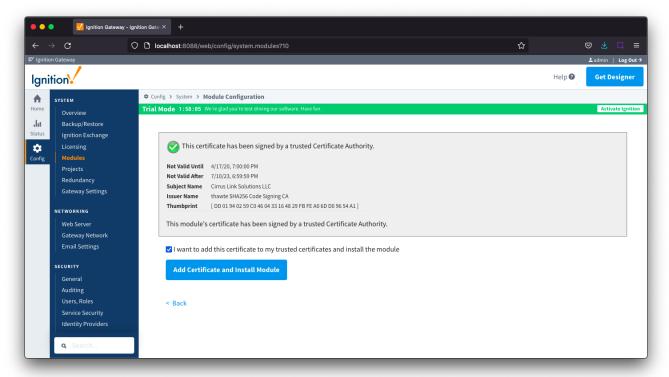

The module should now be successfully installed and appear in the list under the Cirrus Link Solutions LLC heading:

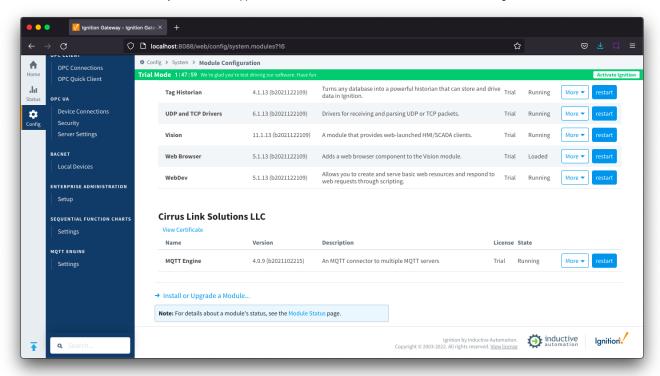

Repeat the above steps for each module that you are installing.

## **Additional Resources**

- Inductive Automation's Ignition download with free trial
  Current Ignition Release
  Cirrus Link Solutions Modules for Ignition
  Ignition Strategic Partner Modules
- Support questions
- Check out the Cirrus Link Forum: https://forum.cirrus-link.com/
  Contact support: support@cirrus-link.com

  Sales questions
- About Cirrus Link
- - https://www.cirrus-link.com/about-us/