Publishing Data to Azure IoT Central

Prerequisites

- Ignition with the Azure Injector Modules installed
 - Azure Injector Module 8.1.10 or later is required.
 - Review the Cirrus Link Module Installation documentation for installation details.
- Ignition Designer installed
 Deview the Indus
- Review the Inductive Automation documentation for Launching Designer against the Ignition gateway
- An existing Microsoft Azure account

Summary

This tutorial will provide step-by-step instructions for the following:

- Configuring the Azure Injector Module to connect to Azure IoT Central
- · Publishing live tag data and events to Azure IoT Central

Upon completion of this module you will have an Ignition Gateway connected and publishing live Tag data to an Azure IoT Hub.

Tutorial

Step 1: Set up an IoT Central Application

Follow the instructions in the Microsoft IoT Central How-to Guide for creating an IoT Central Application

Step 2: Set up a Device

Follow the instructions in the Microsoft IoT Central How-to Guide for adding a device to your Azure IoT Central application

Once configured, the device should look similar to the following:

Image: Connect Image: Conne Image: Connect Image:	MyTestAnn001		ſ	Q Search for devices				ത്	2	
	≡ Connect	>	+ New ← Import						7	3
iiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiii	Ø Devices		Device explorer helps you	see all your devices. Detailed info	rmation like device raw data he	lps you troubleshoot. Learn more	ď			
2 Device templates MyInjectorConnector MyInjectorConnector Provisioned Unassigned MyTestApp001 Analyze ✓ Data explorer ✓ Data explorer ✓ Data explorer ✓	Device groups		Device name	Device ID	Device status	Device template	Organizatio	n		
丑 Dashboards	길 Device templates Analyze ☆ Data explorer 교 Dashboards		MyInjectorConnector	MyInjectorConnector	Provisioned	Unassigned	MyTestApp00	1		

Make sure to note the 'Device ID' as this will be used later in the configuration of Azure Injector

Step 3: Record Security Permissions needed

From the left hand menu bar under Security > Permissions > Device connection groups, record the "ID scope" as this will be used later in the configuration of Azure Injector.

$\leftrightarrow \rightarrow C$	O A https://mytestapp001.azureiotc	entral.com/permissions/device-connection-gr	oups	ಕ	3 0	ອ 📫 ≡
MyTestApp001		$\mathcal P$ Search for devices			۵	? 🔘
=	Permissions <	+ New				
Dashboards	Organizations	Device connection g	oups			
Manage	Users	We use the Azure IoT Hub Device Provis	oning Service (DPS) to register and c	onnect devices. Learn	n more 🖾	
🖒 Jobs	Roles	ID scope (i)				
Extend	Device connection groups	Statistic Will	<u>C</u>			
🖉 Rules	API tokens	Auto-approve new devices ①				
ි Data export		On				
Security						
S Permissions		Enrollment groups				
Settings		Name	Attestation type	Created	Group type	
P Application		SAS-IoT-Devices	Shared access signature (S	8/2/2022	IoT devices	
Customization		SAS-IoT-Edge-Devices	Shared access signature (S	8/2/2022	IoT Edge devices	

From the left hand menu bar under Security > Permissions > Device connection groups > SAS-IoT-Devices > Shared access signature (SAS), record either the "Primary key" or "Secondary key" as this will be used later in the configuration of Azure Injector.

🗧 🕒 💿 🧐 Enrollment ş	group SAS-loT-Devi × +	
$\leftarrow \rightarrow G$	O A https://mytestapp001.azureiotcent	ral.com/permissions/device-connection-groups//
MyTestApp001	, ,	P Search for devices
=	Permissions <	🗟 Save 🔟 Delete
Dashboards	Organizations	Shared access signature (SAS)
Manage	Users	
🕒 Jobs	Roles	Shared across signature (SAS)
Extend	Device connection groups	Devices use Shared Access Signature (GAS) security tokens to connect to IoT
⁷ ₂₀ Rules	API tokens	Central. Use the group-level SAS keys that will appear below to generate keys for your individual device(s). Learn more C
<a>c₂ Data export		Auto generate keys
Security		Off Off
S Permissions		Primary key ①
Settings		Secondary law (0)
Application		
四 Customization		

Step 4: Configure the Azure Injector Module

Once you have Ignition and the Azure Injector Module installed and running we can setup the configuration to connect to your existing Azure IoT Central endpoint.



ightarrow C	O D localhost:80	38/web/conf	ig/azure.azure	elnjectorSettings?9				☆		⊘ ⊻ □
gnition Gateway										Ladmin Log
nition									Help 🕜	Get Design
SYSTEM	🌣 Config > > A	zure Injector	Settings							
ne Overview	Trial Mode 1:44	:04 We're gla	d you're test drivi	ng our software. Have fun.						Activate Ign
Backup/Restore										
us Ignition Exchange	Comm		e leT live	Annual of Educa	Annua Cuant Multa	Anuna laT Cantral	Cata	Tea baselo		
Licensing	Genera	i Azu	re lot Hubs	Azure IOT Edges	Azure Event Hubs	Azure Io1 Central	Sets	Tag Agents		
fig Modules										
Projects	Main									
Gateway Settings		_			_					
	Setting	Name	A friandly nam	o for this Azuro IoT Cont	rol cotting					
NETWORKING			A menuty nam	e for this Azure for Cent	ratsetting					
Web Server	Enabled	1	🗹 Enable this	setting						
Email Settings										
	Scope II	b	admin	Control Conno ID - Found	lin InT Control & Administ	nation - Device Cattings				
SECURITY			The Azure for t	central Scope ID - Found	inioi central -> Administ	ration -> Device Settings				
General										
Auditing	Passwo	rd	The Azure Enro	ollment Group Symmetr	ic Key - Found in IoT Centr	al -> Security -> Permission	ns -> Device C	onnection Groups	-> [SAS-IoT-Devic	es] -> SAS ->
Service Security			Primary/Secor	ій кеу						
Identity Providers										
Security Levels	Passwo	rd	Re-type passw	ord for verification.						
Security Zones										
			global.azure-	devices-provisioning.ne	et					

Navigate to the Azure Injector Modules configuration section from the left side bar in the Ignition Gateway and select the Azure IoT Central tab.

Set the following fields.

 \odot

- Setting Name

 This can be any string that makes sense that represents this connection.
- Enabled
- ° Leave checked
- Scope ID

 - This is the ID scope recorded in Step 3
 Found under Security -> Permissions -> Device connection groups and labeled 'ID scope'
- Password (Azure Enrollment Group Symmetric Key)
 - This is the Primary key or Secondary key recorded in Step 3
 - Found under Security -> Permissions -> Device connection groups -> [SAS-IoT-Devices] -> SAS -> Primary key or Secondary key. Either key can be used for the connection.
- Global Endpoint
- Leave default Provisioned Device ID
 - - $^{\circ}~$ This is the Device ID that was provisioned in Step 2 of this tutorial

All other fields can remain default. Finally, click 'Save Changes' at the bottom of the configuration page. After a bit of time (about 30s or so) you should see the status go from 'Disconnected' to 'Connected' as shown below.

Set ing Name Config Setting Name Config Setting Name Enabled Store & Forward Enabled Status Setting Name Enabled Setting Name Config Setting Name Enabled Setting Name Config Setting Name <t< th=""><th>← -</th><th>> C</th><th></th><th>calhost:8088/we</th><th>b/config/azure.azur</th><th>elnjectorSetting</th><th>s?26</th><th></th><th></th><th></th><th></th><th>☆</th><th></th><th>⊽ ± »</th></t<>	← -	> C		calhost:8088/we	b/config/azure.azur	elnjectorSetting	s?26					☆		⊽ ± »
SYSTEM Config >) Azure Injector Settings Config >) Create new Azure Injector Setting	🛙 Ignitio	n												🛓 admin Log Ou
SYSTEM © Config > > Azure Injector Settings Overview Trial Mode 1:23:03 We're glad you're text driving our software: Have fun. Activation and the software function and	lgni	tion											Help 🕜	Get Designer
Home Overview Trial Mode 1:23:03 We're glad you're test driving our software. Have fam. Active Backup/Restore Ignition Exchange Ignion Exchange <	•	SYSTEM	🌣 Cont	ig > > Azure li	njector Settings									
Interse Backup/Restore Ignition Exchange General Azure IoT Hubs Azure IoT Edges Azure IoT Central Sets Tag Agents	lome	Overview	Trial N	lode 1:23:03 V	Ve're glad you're test driv	ing our software. Ha	ve fun.							Activate Igniti
Status Ignition Exchange Uccasing General Azure IoT Hubs Azure IoT Edges Azure Event Hubs Azure IoT Central Sets Tag Agents Modules Projects Redundancy Gateway Settings Azure IoT Central true Default false Connected delete edit NETWORKING Web Server Gateway Network Create new Azure IoT Central Setting False False False False	հո	Backup/Restore												
Clicensing Clicensing </td <td>status</td> <td>Ignition Exchange</td> <td></td> <td>General</td> <td>Azuro IoT Hubs</td> <td>Anura IoT Ec</td> <td>Inor</td> <td>Azuro Event Hubs</td> <td>Azuro IoT Control</td> <td>Sate</td> <td>Tag Agonto</td> <td></td> <td></td> <td></td>	status	Ignition Exchange		General	Azuro IoT Hubs	Anura IoT Ec	Inor	Azuro Event Hubs	Azuro IoT Control	Sate	Tag Agonto			
Anny Modules Projects Redundancy Gateway Settings NETWORKING Web Server Gateway Network	\$	Licensing		General	Azureior Hubs	Azureior Ec	iges	Azore Event Hubs	Azure for central	3663	Tag Agents			
Redundancy Gateway Settings Azure IoT Central true Default false Connected delete edit NETWORKING → Create new Azure IoT Central Setting → Create new Azure IoT Central Setting → → Create new Azure IoT Central Setting →<	onfig	Projects		Setting Nam	P	Enabled	Set	Store & Forwa	ard Enabled	s	tatus			
Gateway Settings Azure IoT Central true Default false Connected edit NETWORKING → Create new Azure IoT Central Setting Web Server Gateway Network		Redundancy		occurs runn										
NETWORKING → Create new Azure IoT Central Setting Web Server Gateway Network		Gateway Settings		Azure IoT Ce	ntral	true	Defa	ult false		C	onnected		de	lete
Web Server Gateway Network		NETWORKING		→ Create nev	v Azure IoT Central	Setting								
Gateway Network		Web Server												
		Gateway Network												

Also, in the IoT Central Application portal under devices you should see the device is connected.

🗧 🔵 🌖 🧕 🧕 🕄	+				
$\leftarrow \rightarrow \mathbf{G}$	O A https://mytestapp001.azureiotcentral.com/devices/details/MyInjectorConnector/rawdata	☆		◙	
MyTestApp001	P Search for devices		۵	?	à
=	ダ Connect 🚳 Manage template \vee 🕜 Manage device \vee		0	3 03	V
Connect	Devices > MyInjectorConnector				
Devices	MyInjectorConnector				
.:: Device groups	Connected Last data received: 8/2/2022, 5:29:44 PM Status: Provisioned Organization: MyTestApp001				
Device templates	Raw data Mapped aliases				
Analyze	Timestamp 1 Message type Event creation time Unmodeled data				
🖄 Data explorer	✓ 8/2/2022, 11:44:30 AM Device connected				
🖽 Dashboards	1 { 2 "_eventtype": "Device connected",				Т
Manage	3 "_timestamp": "2022-08-02T16:44:30.93084432" 4 }				

Now the Azure Injector module is connected to the MQTT server in Azure IoT Central, we have to determine if there are changes needed to the Tag Agent tab to be able to push data.

If you already have Ignition tags defined, for example from the Ignition OPC UA Server, then depending on the depth of your tag tree you may need to configure the Sparkplug Settings.



Once the Tag Agent is setup as needed, you can jump to Step 6: Publishing data.

If you do not have Ignition tags defined we will do that in the next step with a tag tree depth that requires no additional Sparkplug settings.

Step 5: Create tags to be published in Designer

When the Azure Injector module is installed in Ignition, an Edge Node folder is automatically created in the 'default' Ignition tag provider.

	la mula katantu kanit	ine Onter	unu Instition Destance		
samp	lequickstart - Ignit	Ion Gatew	vay - Ignition Designer		
╡▐゚゚゚゚゚ !	≫ -9 1	K 11 1	ŀ		
Tag Browser			Ð	$_{-}$ \times	^
+- Q C defa	ult		•	÷-	s
Ta	gs		UDT Definitions		
Tag	Value		Data Type		
Edge Nodes					
			199 /	1024	mb 🛒

Create a tree structure under this folder as shown below with some memory tags - this folder structure creates the same hierarchy that is described in the Sparkplug B specification of Group ID, Edge ID, and Device ID.

Refer to the Ignition Tag Browser and Creating Tags documentation for assistance in configuring Ignition tags



Step 6: Publishing data

When the Azure Injector module is installed in Ignition, an Azure Injector tag provider is automatically created. This folder will contain both information tags about the module's version and state, as well as control tags for refreshing the module and Tag Agents.

Make sure that the Ignition Designer has read/write communications turned on by selecting the Project/Comm Read/Write button highlighted in the image below.

Tag Browser		ē _ ×	^
+- Q C Azure Injector		▼ 1 -	s
Tags	l	JDT Definitions	
Tag	Value	Data Type	

Review the Inductive Designer Interface documentation for additional assistance on setting the project communication mode

To refresh the default Tag Agent, open the folder "Azure Injector Control" and click on the Refresh Boolean. When this happens, the Tag Agent will scan the "Edge Nodes" folder and find the new Memory Tags that we have created, construct JSON payloads representing those tags with their current values and publish the payload to the Azure IoT Central endpoint that we have configured.

	- Ignition Gateway -	Ignition Designer	
Tag Browser		ت _ ×	^
+- Q ♀ Azure Injector		▼ ‡ -	s
Tags	U	DT Definitions	
Tag	Value	Data Type	
► 🐼 Refresh ► 💼 Azure Injector Info		Boolean	
		210 / 102 /	

/ The Boolean tag will not change to true. This is really a one-shot and as a result, the tag will not change to true.

The Azure Injector Tag Agent will publish two JSON payloads to the Azure IoT Central endpoint. The format of these messages closely follows the Sparkplug B Specification's payload structure.

The first message shows the 'NBIRTH' message which is an indication that the Sparkplug Edge Node has come online.

The second message is a Sparkplug DBIRTH message denoting that a Sparkplug Device has come online along with its 'metrics' or tags, tag metadata, and values. In this case only a single tag is included in the payload.



This includes the following data messages.

```
{
    "_unmodeleddata": {
        "topic": {
            "namespace": "spBv1.0",
            "edgeNodeDescriptor": "G1/E1",
            "groupId": "G1",
            "edgeNodeId": "E1",
            "type": "NBIRTH"
        },
        "payload": {
            "timestamp": 1659458670039,
            "metrics": [
                {
                    "name": "bdSeq",
                    "timestamp": 1659458670039,
                    "dataType": "Int64",
                    "value": 0
                }
            ],
            "seq": 0
        }
    },
    "_eventtype": "Telemetry",
    "_timestamp": "2022-08-02T16:44:31.511Z"
}
```

```
{
    "_unmodeleddata": {
        "topic": {
            "namespace": "spBv1.0",
            "edgeNodeDescriptor": "G1/E1",
            "groupId": "G1",
            "edgeNodeId": "E1",
            "deviceId": "D1",
            "type": "DBIRTH"
        },
        "payload": {
            "timestamp": 1659458670049,
            "metrics": [
                {
                    "name": "T1",
                    "timestamp": 1659458670049,
                    "dataType": "Int32",
                    "metaData": {},
                    "properties": {
                         "Quality": {
                            "type": "Int32",
                             "value": 192
                        }
                    },
                    "value": 12
                }
            ],
            "seq": 1
        }
    },
    "_eventtype": "Telemetry",
    "_timestamp": "2022-08-02T16:44:31.527Z"
}
```

Step 7: Force a data change

Because Azure Injector is driven by tag change events, try writing a '10' to the T1 tag. Do this by double clicking the T1 tag in Designer and updating the Value parameter.

This will result in a new DDATA message as shown below.

```
{
    "_unmodeleddata": {
        "topic": {
            "namespace": "spBv1.0",
            "edgeNodeDescriptor": "G1/E1",
            "groupId": "G1",
            "edgeNodeId": "E1",
            "deviceId": "D1",
            "type": "DDATA"
        },
        "payload": {
            "timestamp": 1659462601542,
            "metrics": [
                {
                    "name": "T1",
                    "timestamp": 1659462601542,
                    "dataType": "Int32",
                    "value": 10
                }
            ],
            "seq": 2
        }
    },
    "_eventtype": "Telemetry",
    "_timestamp": "2022-08-02T17:50:02.771Z"
}
```

Additional Resources

- Inductive Automation's Ignition download with free trial

 Current Ignition Release

 Cirrus Link Solutions Modules for Ignition

 Ignition Strategic Partner Modules
 Support questions
 Check each each of Strate Communication of Strategic Partner Modules
- Check out the Cirrus Link Forum: https://forum.cirrus-link.com/
 Contact support: support@cirrus-link.com
 Sales questions

- Email: sales@cirrus-link.com
 Phone: +1 (844) 924-7787
 About Cirrus Link

 - https://www.cirrus-link.com/about-us/