Installing Ignition Edge MQTT as a Docker Container

Prerequisites

- · Ensure you have a platform that supports either Linux 64-bit Docker images or ARM HF images
- Hilscher provides a number of gateways that support 64-bit Linux containers and ARM HF containers

 https://www.hilscher.com/products/product-groups/industrial-internet-industry-40/netiot-edge/
 https://www.netiot.com/netpi/industrial-raspberry-pi-3/
- This tutorial will use Portainer to set up and configure the container. However, this could all be done via the command line if you prefer.

Summary

This tutorial will cover the downloading, configuration, and starting of Ignition Edge MQTT as a Docker container using Portainer.

Upon completion of this tutorial you will have Ignition Edge MQTT installed as a Docker container which will be ready to configure and use.

Tutorial

Step 1: Start Portainer

Begin by ensure Portainer is running and you are set up to manager the target Docker environment. Information on Portainer can be found here. If using a Hilscher Edge device consult the Hilscher documentation for access to the Portainer Portal.

Step 2: Download the Ignition Edge MQTT image

Open a Web Browser to your Portainer instance and select 'Images' on the left. In the name section enter one of the two following strings depending on your platform architecture:

- If Linux 64-bit is supported: cirruslink/ignition-edge-mqtt-linux-64:latest
- If Linux ARM HF is supported: cirruslink/ignition-edge-mqtt-linux-arm32v7:latest

The repositories can be viewed here:

- https://hub.docker.com/r/cirruslink/ignition-edge-mqtt-linux-64
- https://hub.docker.com/r/cirruslink/ignition-edge-mqtt-linux-arm32v7

Shown below is an example for 64-bit Linux. After entering the target image into the name field, click the 'Pull the Image' button to download it. You must have internet connectivity for this to succeed. Once the download is complete, you should see something similar to the following.

🔴 🕘 🧃 Portainer	× +	
← → ♂ ☆	① 🔓 https://192.168.0.84/portainer/#/images … ⊽ ☆ 👱 🛍 🗉 🛎 » 🗧	₽
🗊 portainer.io 🚍	Image list 🗧 Ortainer support \varTheta admin Images	
Home A ♥ PRIMARY Dashboard & Ann Templates A	Le Pull image	
Stacks	Image cirruslink/ignition-edge-mqtt-linux-64:latest Registry DockerHub	
Containers Images Networks Volumes Events Host SETTINCS Extensions Users Contractions 4	Note: if you don't specify the tag in the image name, Litest will be used. Pull the image Images Remove + Build a new image Import Export Q Search	
Enapoints ♥ Registries 🛢 Settings ✿	Id Tags I1 Size Created Filter Tags I1 Size Created sha256:7d8ac2349c7b99839b663b93a6c1c4 cirruslink/ignition-edge-mqtt-linux-64:latest 1.8 GB 2019-09-04 21:40:07 terms per page 10 •	
portainer.io 1.20.1		

Step 3: Create the Volumes

Select 'Volumes' on the left and add two new ones by clicking the 'Add Volume' button. Then type the name of the first volume as 'ignition' as shown below and click 'Create the volume'. Ensure 'Use NFS volume" and 'Enable access control' are both disabled.

🔴 🔴 🌒 🧃 Portainer		× +	
← → ♂ ☆		🛈 🚯 https://192.168.0.84/portainer/#/volumes/new	
portainer.io	ţ,	Create volume Volumes > Add volume	September 2018 Portainer support Oradmin
Home	ñ		
₩ PRIMARY		Name ignition	
Dashboard	6 0		
App Templates	*	Driver configuration	
Containers	-	Driver	
Images			Ü
Networks	- -	Driver options ? Q add driver option	
Volumes	& 6		
Events		Use NFS volume	
Host			
		Access control	
Extensions		Enable access control 2	
Users	*2:		
Endpoints		Actions	
Registries	8		
Settings	\$ °	Create the volume	
4			
portainer.io 1.20			

Repeat the volume creation process described above to create a second volume called 'bin'. When complete, the volumes should look as follows:

Portainer	× +			
← → ♂ ✿	(i) 🔒 https://192.168.0.84/portainer/#/volume	es	⊘ ☆	⊻ II\ 🗉 🛎 🛎 ≫ 🖆
🗊 portainer.io 🚌	Volume list 🔁			© Portainer support ⊖ admin
Home Image Dashboard Image App Templates Images Containers Images Images Images Networks Images Volumes Images SETTINCS Images Endpoints Images Settings Images Settings Images	Volumes Remove + Add volume Search Name 12 Sta bin Unused - ignition Unused -	ack Driver local local	Mount point /run/.system_part/docker/volumes/bin/_data /run/.system_part/docker/volumes/ignition/_data	Ownership @ public @ public Items per page 10 •

Step 4: Define and Start the Container

Now select 'Containers' on the left and click the 'Add Container' button. Set the following parameters:

- Name = ignition-edge-mqtt
- Image Name = (the image downloaded dependent on your hardware platform architecture)
 If Linux 64-bit is supported: cirruslink/ignition-edge-mqtt-linux-64:latest
 If Linux ARM HF is supported: cirruslink/ignition-edge-mqtt-linux-arm32v7:latest
- Always pull the image = not selected
- Publish all exposed ports = selected
 Publish all exposed ports = selected
 Map the following additional ports. Note you may need or want to change the first parameter (host port) depending on your platform

 22 22 (TCP)
 80 80 (TCP)

 - 443 443 (TCP)
 - 8000 8000 (TCP)
 - 8043 8043 (TCP)
 - 8060 8060 (TCP)
 - 8088 8088 (TCP)
- Enable access control = not enabled

This is all shown below in the 64-bit Linux example.

		(i) 🔏 https://19	2.168.0.84/portainer/#/containers/n	ew			⊠ ☆			$\overline{\mathbf{A}}$	111\ 0	1		>>	
portainer.io	₽	Create con Containers > Add of	tainer container						🕲 Po	rtaine	r sup بر	port ^e my a	t 🛛 a	dmin + log out	1 tt
Home	Â	-													
₩ PRIMARY		Namo	invition of a matt												
Dashboard	£ 3	Name	ignition-eage-indit												
App Templates	¥	Image cor	nfiguration												
Stacks	=					_								_	
Containers	=	Image	cirruslink/ignition-edge-mq	t-linux-6	4:latest	Registry	DockerHub							-	
Images	e														
Networks	÷.	Always pul	II the image 😢 🔵												
Volumes	\$	Dente cont	liauration												
Events		Ports com	liguration												
Host		Publish all	exposed ports 😮 🗾												
Extensions	•	Port mapp	ing G map additional port												
Users	*	host	22	→	container	22		ТСР	UDP						
Endpoints	<u> </u>	host	80		container	80		тср							
Registries		nost			container										
Settings	₩6	host	443	-	container	443		ТСР	UDP						
		host	8000	→	container	8000		ТСР	UDP						
		host	8043	→	container	8043		тср	UDP						
		host	8060	→	container	8060		тср	UDP	Î					
			0000		container	8088		тср		A					
		host	8088		container	0000									

In addition set the following advanced properties via the bottom tabs.

• Map the Volumes as shown below.

Ortainer		×	+												
← → ♂ ⓓ		🛈 🚯 http	s://192.168.0.8	4/portainer	/#/containe	rs/new			⊘ ☆		<u>↓</u> II/	Ē	<u>.</u>	» »	
portainer.io	*	Dej	ploy the contain	ner											
Home	*														
₩ PRIMARY		🌣 Ad	vanced conta	ainer settir	igs										
Dashboard	2														
App Templates	4						_					-			
Stacks	=	C	ommand &	Volu	mes	Network	Env	Labels	Restart	Runtime & Resources		Сар	abilitie	S	
Containers	=		logging						poncy	Resources					
Images		Mahum		0	· · · · · · · · · · · · · · · · · · ·										
Networks	*	Volum	ne mapping	🔾 map addi	tional volume										
Volumes	&		container	/opt/	ignition			Volume	Bind 📋						
Events	3	→	volume		ignition - loca	al		• Writable	Read-only						
Host															
SETTINGS			container	/bin				Volume	Bind						
Extensions	7	-	volume		bin - local			• Writable	e Read-only						
Users	: <u>8</u> :														
https://192.168.0.84/portainer/	¥														- 11

• Set the Restart policy as shown below.

🔴 🔵 🌒 🧃 Portainer		× +								
← → ♂ û		(i) 🔬 https://192.168.0.8	4/portainer/#/contain	ers/new			⊠ ☆	$\overline{\mathbf{A}}$	III\ 🗉 📱 🔍	»
portainer.io	₽	Deploy the containe	r							
Home	*	1								
₩ PRIMARY										
Dashboard	26	🌣 Advanced contai	ner settings							
App Templates	*									
Stacks		Command &	Volumes	Network	Env	Labels	Restart	Runtime &	Capabilities	
Containers	=	logging					policy	Resources		
Images	۲									
Networks	. #.	Restart policy N	ever Always On	failure Unless stop	bed					
Volumes	తం	_								
Events	3									

• Leave all other 'Advanced container settings' default.

ortainer.i	∘ ⊉_	Ports conf	figuration												-
Home	â	Publish all	exposed ports 😮												
₩ PRIMARY	,	Port mapp	ing O map additional port												
Dashboard	en e														
App Templates	4	host	22	→	container	22		ТСР	UDP						
Stacks	=	host	80	→	container	80		ТСР	UDP						
Containers		host	443	→	container	443		тср	UDP						
Images	e	host	8000] →	container	8000		тср	UDP						
Networks	.	host	8043	í →	container	8043		тср	UDP						
Volumes	æ			1.		0015									
Events	3	host	8060	-	container	8060		ТСР	UDP						
Host		host	8088	→	container	8088		ТСР	UDP						
		Access co	ntrol												
Extensions	7	Accessico													
Users	***	Enable acc	cess control 😮 🦳												
Endpoints	<u> </u>														
Registries	8		\sim					•: Do	trictod						٦
Settings	\$ %		🗞 Administrators				I want to restrict the manage	ment of	this res	ource to	o a set	of use	rs and/	'or	
		I want '	to restrict the management of this resource	to adm	inistrators only			tea	ams						
															-
		Actions													_

Finally, deploy the container by clicking the 'Deploy the container' under the 'Actions' section as shown below.

After deploying you should see the new container now running as shown below.

🕨 😑 🔋 🔋 Portainer		× +									
-)→ C' û		🛈 🔬 https://192.168.0.84/p	oortainer/#/cc	ontainers			··· 🗵 🕁	⊻ ∥	I\ 🗊 📱	۵ »	:
portainer.io	#	Container list 🖯						Ortainer 📀	support	e admin	ר גנ
Home ¥ PRIMARY	â	Containers							olumns 🌣	Settings	
Dashboard App Templates	€0 -₹	► Start ■ Stop @	Kill 🖉 Resta	art 🔋 Pause	▶ Resum	ne 💼 Remove	+ Add container				
Stacks Containers	=	Q Search									
Images Networks		Name	State 12 Filter T	Quick actions	Stack	Image		Created	IP Address	Publishe	ed
Volumes Events	& ~	ignition-edge-mqtt	running	6 • >_	-	cirruslink/ignit	ion-edge-mqtt-linux-64:latest	2019-09-04 22:42:17	172.17.0.2	32002:4	44
Host								ltems p	er page	10 •	
Extensions	•										
Users	*										
Endpoints	¥										
Registries	8										
Settings	\$										

Step 5: Connect to the Ignition Edge Web UI and start using Ignition Edge MQTT

At this point you are ready to configure and use Ignition Edge MQTT. The Ignition web UI is available on the docker port 8088. If you mapped 8088 8088, you can access the Ignition Web UI by browsing to http://[docker_host_ip]:8088.

See the following two links for information on how to configure and use Ignition Edge MQTT.

- MT: ConfigurationGetting Started: Two Ignition Architecture

Notes

If using a Hilscher Gateway with Docker support, make sure you set 'Docker Autostart' to 'enabled' as shown below.

Edge Gateway Manager	× Control Panel × +		
← → ♂ ☆	https://192.168.0.84/content/?page=services	🛛 🕁	⊻ II\ 🗉 🛎 🔍 > 🛁
			English
Control Panel System • Package Manager • Ne	work ▼ Services ▼ User Management ▼ Security ▼ Help ▼ Sessi	ion 🗸	
Node-RED	Docker		
MQTT Broker	Autostart enabled disabled		
AIN Connector	Please change Docker Management (nortainer in) password immediately after the se	ervice has been started	
Diagnostics	2 · · · · · · · · · · · · · · · · · · ·		
Edge Server			
Docker			
OPC UA Server for Edge			
InformixHQ Server			
InformixDB Server	1		