

Opto 22 groov EPIC and SNAP PAC Driver

The Opto 22 *groov* EPIC and SNAP PAC Driver module is an Ignition driver for accessing Tags directly from Opto 22 groov EPIC and SNAP PAC™ controllers.

Supported Opto 22 products and firmware

- All *groov* EPIC and SNAP PAC controllers and SoftPAC™ software-based controllers with PAC firmware R9.2c or higher

For the versions of Ignition recommended for this driver, see [Cirrus Link's Module Installation](#).

To download the driver module:

1. Go to Inductive Automation's [Strategic Partner Modules download page](#).
2. Select the version of Ignition you are using so the proper compatible modules appear.
3. Scroll down, under Cirrus Link Solution MQTT Modules for Ignition, select Opto-22-groov-EPIC-and-SNAP-PAC-Driver-signed.modl.

More information including installation instructions can be found in the links below.

- [Cirrus Link Module Installation](#)
 - Step by step instructions to install modules into Ignition
- [Opto 22 groov EPIC and SNAP PAC Module Configuration](#)
 - Configuration guide for the Opto 22 module
- [Opto 22 groov EPIC and SNAP PAC Module Tutorials/Howtos](#)
 - Tutorials and howtos covering installation, configurations, and usage of AWS Injector
- [Opto 22 groov EPIC and SNAP PAC Module Videos](#)
 - Installing the Driver module
 - Configuring the Driver module
 - Scanning Specific Tags