

ME: Configuration

MQTT Engine provides a configuration section to the Ignition Gateway. These can be seen in the Configure section of the Ignition Gateway web UI in the left-hand navigation pane - Configure MQTT Engine Settings. Once in the configuration section there are three tabs: Servers, Advanced, and Namespaces. Each of these tabs is described in detail in the following sections.

General

The first tab contains general settings which allows one to enable/disable the module, configure Application ID Filters, and Cirrus Link Chariot Access Settings. The Chariot access settings are used in conjunction with a Cirrus Link Chariot deployment and will be provided when purchasing Chariot Cloud services.

Main

- **Enabled**
 - Whether or not the MQTT Engine module is enabled and connecting to configured MQTT Servers.
- **Primary Host ID**
 - The primary host ID to use for 'state' checks. These checks are used to ensure that the primary backend MQTT Engine client remains connected. If the primary host ID is set, MQTT Engine will publish its connection state on a topic that contains the Primary Host ID. In the event that MQTT Engine becomes disconnected from the server, a death certificate will be published on the same topic, setting the state to 'offline'. Any connecting client that subscribes on the state topic will then be notified of the MQTT Engine state and walk to the next server if MQTT Engine is offline.
 - This must contain only letters, numbers, and the following special characters: . \$ % @ ! - _ ^ *
- **Group ID Filters**
 - A comma separated list of group IDs to subscribe to.

Chariot Access

- **Chariot Cloud Access Key**
 - If using Cirrus Link's Chariot platform, this is the provided Access Key
- **Chariot Cloud Secret Key**
 - If using Cirrus Link's Chariot platform, this is the provided Secret Key

Miscellaneous

- **Block Node Commands**
 - Whether or not to block outgoing commands from MQTT Engine to Edge Nodes. This is true by default and provides a security mechanism for preventing accidental outgoing commands from MQTT Engine.
- **Block Device Commands**
 - Whether or not to block outgoing commands from MQTT Engine to Devices. This is true by default and provides a security mechanism for preventing accidental outgoing commands from MQTT Engine.
- **File Policy**
 - The policy for handling Files contained within a Sparkplug payload.
 - **Ignore:** The default policy. The file will be ignored.
 - **Store:** The file will be stored to the local file system in the directory specified by the File Location field. A Tag will be created with a String value representing the file URI.
- **File Location**
 - The directory to store the files when using the **Store** policy described above.
- **Store Historical Events**
 - Whether or not to write historical change events directly to the Historian (if history is enabled on a Tag) instead of updating the live Tag value.

Advanced

These are advanced settings/features and they **should be left with default values in almost all cases**. Please be careful when changing these settings from their default values.

- **Enable Tag Latching**
 - Whether or not to enable Tag latching to synchronize MQTT Tag updates with events in Ignition.
- **Latch Timeout**
 - The amount of time to wait for a Tag latch to be released before timing out.
- **Latch Tags**
 - A list of Trigger Tag and Latch Tag pairs.
- **Enable Primary Host Subscriptions**
 - Whether or not to enable MQTT Engine subscriptions on STATE/# and State/# topics even when a PrimaryHostID is not configured within MQTT Engine. This setting is for debugging purposes only.
- **Enable BD Sequence Validation**
 - Whether or not to enable BIRTH/DEATH sequence number validation (required by Sparkplug specification).
- **Custom Properties**

- Custom configuration properties that are fed into MQTT Engine. Custom properties should only be used at the direction of Cirrus Link and the specific properties will be provided.

The screenshot shows the Ignition Gateway web interface at localhost:8088/main/web/config/mqttengine.settings?4. The left sidebar contains a navigation menu with categories like Overview, NETWORKING, SECURITY, DATABASES, ALARMING, TAGS, OPC-UA SERVER, OPC CONNECTIONS, and MOBILE. The main content area is titled 'MQTT Engine Settings' and has three tabs: General, Servers, and Namespaces. The 'General' tab is active, showing 'General Settings'.

General Settings


Main	
Enabled	☒ Enable the MQTT Engine
Primary Host ID	 The Primary Host ID to allow connecting clients to ensure they remain connected to this application (optional)
Group ID Filters	 A comma separated list of Group IDs to listen for (optional)

Chariot Access	
Chariot Cloud Access Key	 The optional Chariot Cloud Access Key used for Cirrus Link hosted Chariot MQTT Servers (optional)
Chariot Cloud Secret Key	 The optional Chariot Cloud Secret Key used for Cirrus Link hosted Chariot MQTT Servers (optional)

Miscellaneous	
Block Node Commands	☒ Block outbound edge node tag writes
Block Device Commands	☒ Block outbound device tag writes
Block Property Changes	☐ Block incoming Tag property changes
File Behavior	Ignore

Servers

The second tab is a list of MQTT Servers that MQTT Engine should connect to. By default, MQTT Engine is configured to connect to the local MQTT Distributor based MQTT Server. It is set up to connect to localhost, port 1883, using the default username/password pair of admin/changeme. Out of the box MQTT Engine will work with MQTT Distributor and its default configuration. The connection status of each server can be seen in the 'Status' column. Clicking on the 'Create new MQTT Server' link will bring up the following form for adding a new MQTT Server setting.

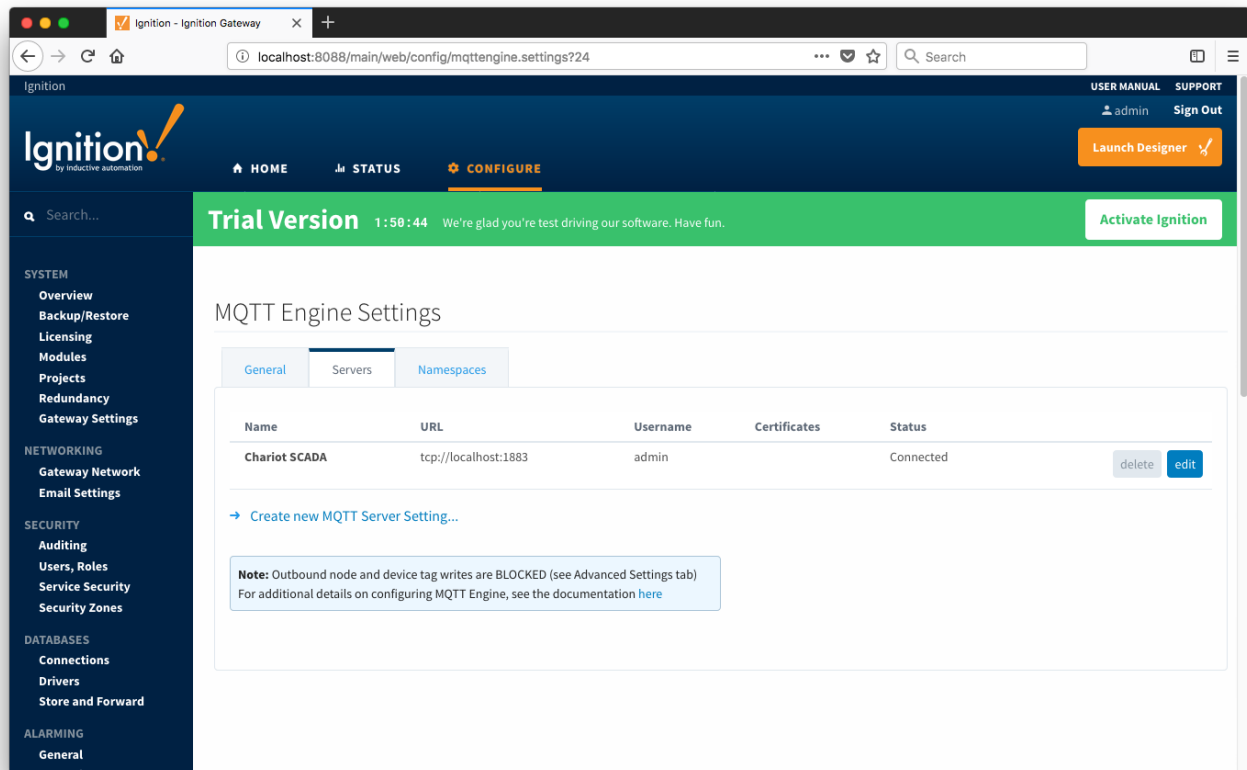

Additional or alternative MQTT Servers can be configured in MQTT Engine. Often times more than one will be configured to handle fail-over in redundant or geographically distributed systems. The configuration options for servers are listed below.

Main

- **Name**
 - This is the friendly name of the MQTT Server used to easily identify it.
- **Enabled**
 - Whether or not connections to this MQTT Server are enabled.
- **URL**
 - This is the URL of the MQTT server. Its format is as follows: [protocol]://[location]:[port]. Each of these are shown below.
 - protocol - Either tcp or ssl
 - location - The server location. e.g. localhost, [myserver.chariot.io](#), [mydomain.com](#), etc
 - port - The port the MQTT Server is listening on. Generally this is 1883 if using TCP or 8883 if using SSL
- **Server Type**
 - This is the type of MQTT Server to connect to.
 - Chariot - If connecting to a Cirrus Link Chariot on-premise or Chariot cloud based MQTT Server
 - MQTT Distributor - If connecting to a Ignition MQTT Distributor server
 - Third Party - If connecting to a third party 3.1.1 compliant MQTT Server
- **Username**
 - Optional MQTT username to use in the MQTT connect packet. This is required if the MQTT Server to connect to requires it.
- **Password**
 - Optional MQTT password to use in the MQTT connect packet. This is required if the MQTT Server to connect to requires it.

TLS Settings

- The configuration for TLS changed between MQTT Engine v3.4.6 and v3.4.7. See this document for TLS configuration: [Configuring Secure MQTT Communication](#)

Advanced Settings

- **Client ID**
 - Optional MQTT client ID to use. If specified this will be used in the MQTT Engine connect packet when connecting to the server. If left blank, a random client ID will be create of the form 'IgnitionTarget-xxxxxxx-xxxx-xxxx'. **Caution:** MQTT Clients IDs **must** be unique and if two clients attempt to connect with the same client ID, one will be forcefully disconnected from the server to allow the other client to connect.
- **Keep Alive**
 - The MQTT client keep alive time (in seconds).

- **Filtered Namespaces**
 - A comma separated list of namespaces that will be filtered/disabled for connections to this MQTT Server.

Clicking on the 'Create new MQTT Server...' link will bring up the following form to add a new Server.

The screenshot shows the 'New MQTT Server Setting' form in the Ignition Gateway web interface. The form is organized into two main sections: 'Main' and 'TLS'.

Main Section:

- Name:** A text input field containing 'New Mqtt Server'. Below it is a description: 'The friendly name of this MQTT Server Setting'.
- Enabled:** A checkbox labeled 'Enable this MQTT Server Setting' which is checked.
- URL:** A text input field. Below it is a description: 'The URL of the MQTT Server to connect to. Should be of the form tcp://mydomain.com:1883 or ssl://mydomain.com:8883'.
- Server Type:** A dropdown menu currently showing 'Choose One'. Below it is a description: 'The type of MQTT Server to connect to'.
- Username:** A text input field. Below it is a description: 'The username for connections if required by the MQTT Server (optional)'.
- Password:** A text input field. Below it is a description: 'The password for connections if required by the MQTT Server (optional)'.
- Password:** A second text input field for verification. Below it is a description: 'Re-type password for verification.'

TLS Section:

- Certificate File Upload:** Includes a 'Browse...' button and the text 'No file selected.' Below this is a description: 'Certificate files to upload. This will replace all previously uploaded certificate files.'
- Password:** A text input field. Below it is a description: 'The password associated with the certificate's private key (optional)'.
- Password:** A second text input field for verification. Below it is a description: 'Re-type password for verification.'

The left sidebar of the web interface shows a navigation menu with the following categories and sub-items:

- Gateway Settings**
 - NETWORKING
 - Gateway Network
 - Email Settings
 - SECURITY
 - Auditing
 - Users, Roles
 - Service Security
 - Security Zones
 - DATABASES
 - Connections
 - Drivers
 - Store and Forward
 - ALARMING
 - General
 - Journal
 - Notification
 - On-Call Rosters
 - Schedules
 - TAGS
 - History
 - Realtime
 - OPC-UA SERVER
 - Certificates
 - Devices
 - Settings
 - OPC CONNECTIONS
 - Servers
 - Quick Client
 - MOBILE
 - Settings
 - ENTERPRISE ADMINISTRATION
 - Setup
 - SEQUENTIAL FUNCTION CHARTS
 - Settings

Namespaces

The third tab is used for configuring namespaces. Each namespace configuration represents a family of devices and/or data that MQTT Engine will support. A namespace defines the topics that each MQTT Engine client will subscribe on as well as indicates how the payload will be handled. There are two types of namespaces: Default and Custom.

Default Namespaces

Default namespaces are provided out of the box and can simply be enabled or disabled. When MQTT Engine is first installed, all default namespaces are enabled. Each default namespace has the following properties:

- **Name**
 - A friendly name of the namespace to easily identify it.
- **Namespace Type**
 - A namespace type.
- **Enabled**
 - Whether or not the namespace is enabled.


If a namespace is enabled, MQTT Engine will subscribe to the topics necessary to provide support for devices and data associated with that namespace. If a namespace is disabled, MQTT Engine will unsubscribe from those topics and no longer support the devices and data associated with that namespace.

The screenshot shows the Ignition Gateway web interface in a browser window. The address bar indicates the URL is `localhost:8088/main/web/config/mqttengine.settings?26`. The interface has a dark blue header with the Ignition logo and navigation links: HOME, STATUS, and CONFIGURE. A green banner at the top indicates a 'Trial Version' with a timer at 1:45:58 and a button to 'Activate Ignition'. On the left, a sidebar lists various system categories: SYSTEM (Overview, Backup/Restore, Licensing, Modules, Projects, Redundancy, Gateway Settings), NETWORKING (Gateway Network, Email Settings), SECURITY (Auditing, Users, Roles, Service Security, Security Zones), DATABASES (Connections, Drivers, Store and Forward), ALARMING (General, Journal, Notification, On-Call Rosters, Schedules), TAGS (History, Realtime), and OPC-UA SERVER (Configurations). The main content area is titled 'MQTT Engine Settings' and has tabs for General, Servers, and Namespaces. The 'Namespaces' tab is active, showing a table with columns for Name, Namespace Type, and Enabled. The table lists five namespaces: B&B Wzzard, Elecsys, Sparkplug A, Sparkplug B, and Xirgo, all of which are enabled. Each row has an 'edit' button. A note at the bottom states: 'Note: For additional details on configuring MQTT Engine, see the documentation [here](#)'.

Name	Namespace Type	Enabled
B&B Wzzard	BBWzzard	true
Elecsys	Elecsys	true
Sparkplug A	SparkplugA	true
Sparkplug B	SparkplugB	true
Xirgo	Xirgo	true

Custom Namespaces

Custom namespaces are used to provide support for generic MQTT messages with string based payloads. If a custom namespace is configured MQTT Engine will convert all messages received to tags. The topic of each message will directly translate into the tag's path. The payload of the message will be that tag's value.

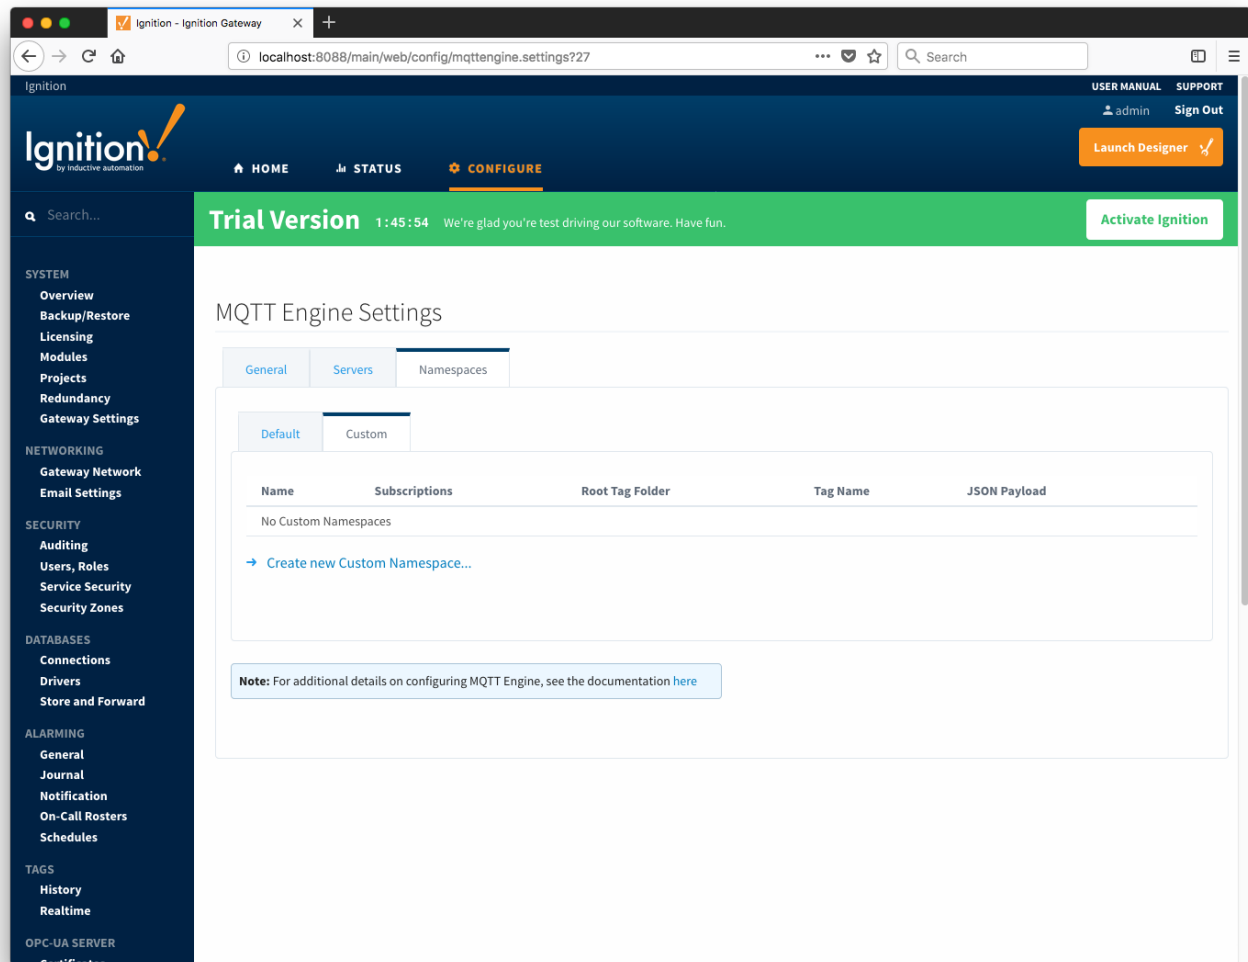

Each custom namespace has the following properties:

Main

- **Name**
 - A friendly name of the namespace to easily identify it.
- **Subscriptions**
 - A comma separated list of subscriptions.

Optional

- **Root Tag Folder**
 - A name of a folder where all tags will be stored. If configured, this folder will be the base folder where all tag paths will start.
- **Tag Name**
 - A tag name to be used for all tags. If not configured, the last token in the topic will represent the tag.
- **JSON Payload**
 - A flag to indicate that the content of the string based payload is a JSON object.

Advanced

- **Writable Tags**
 - Enables writes on tags created by the Custom Namespace. **Note:** This will only make the tags writable; it will **not** result in outgoing MQTT messages.

Note: if a Tag Name is not specified, care must be taken so that published messages do not end up overwriting previous tags.

Clicking on the 'Create new Custom Namespace...' link will bring up the following form to add a new Custom Namespace.

The screenshot shows the Ignition Gateway web interface. The left sidebar contains a navigation menu with categories: Overview, NETWORKING, SECURITY, DATABASES, ALARMING, TAGS, OPC-UA SERVER, OPC CONNECTIONS, MOBILE, and ENTERPRISE. The main content area is titled 'MQTT Engine Settings' and has three tabs: 'General', 'Servers', and 'Namespaces'. The 'Namespaces' tab is active, showing a 'New Custom Namespace' form. The form has two sections: 'Main' and 'Optional'. The 'Main' section includes a 'Name' field (placeholder: 'New Namespace Name') and a 'Subscriptions' field (placeholder: 'Comma separated list of topics the the MQTT server will subscribe on'). The 'Optional' section includes a 'Root Tag Folder' field, a 'Tag Name' field, and a 'JSON Payload' checkbox (checked). Below these is a 'Show advanced properties' checkbox (checked), which reveals an 'Advanced' section with a 'Writable Tags' checkbox (unchecked). A 'Create New Custom Namespace' button is at the bottom right.

MQTT Engine Settings

General Servers Namespaces

Default Custom

New Custom Namespace

Main

Name New Namespace Name
The name of this custom namespace

Subscriptions
Comma separated list of topics the the MQTT server will subscribe on

Optional

Root Tag Folder
The root folder where all tags will be located (optional)

Tag Name
The name of the tag. If left blank the last token in the topic will represent the tag (optional)

JSON Payload ☒ Parse the payload as a JSON string (optional)

☒ Show advanced properties

Advanced

Writable Tags ☐ Makes created tags Writable. Note this will simply make tags writable and will not generate outgoing MQTT messages.

Create New Custom Namespace

Custom Namespace Example

Let say we have a publish received on the topic "test/data/point" with value "12345". If no Tag Value is configured, and a message is received, MQTT Engine will create a two folders "test" and "data" and a tag "point" with the value of "12345".

Ignition - Ignition Gateway

localhost:8088/main/web/config/mqttengine.settings?29

Search

Ignition
by inductive automation

HOMESTATUSCONFIGURE

USER MANUALSUPPORT
adminSign Out
Launch Designer

Search...

SYSTEM
Overview
Backup/Restore
Licensing
Modules
Projects
Redundancy
Gateway Settings

NETWORKING
Gateway Network
Email Settings

SECURITY
Auditing
Users, Roles
Service Security
Security Zones

DATABASES
Connections
Drivers
Store and Forward

ALARMING
General
Journal
Notification
On-Call Rosters
Schedules

TAGS
History

Trial Version 1:43:50 We're glad you're test driving our software. Have fun.

Activate Ignition

MQTT Engine Settings

GeneralServersNamespaces


DefaultCustom

Successfully created new Custom Namespace "New Namespace Name"

Name	Subscriptions	Root Tag Folder	Tag Name	JSON Payload	
New Namespace Name	test/#			false	deleteedit

Create new Custom Namespace...

Note: For additional details on configuring MQTT Engine, see the documentation [here](#)

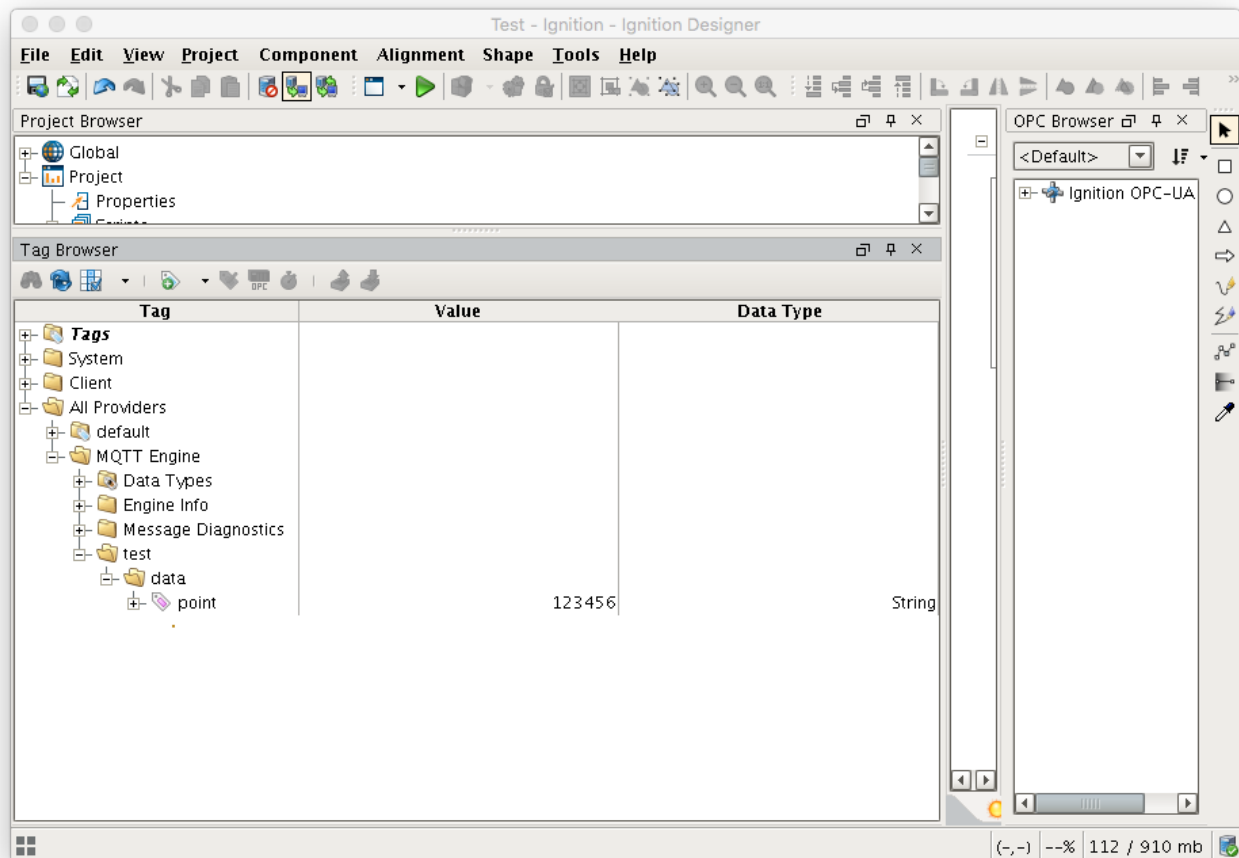

Alternatively if a Tag Name is configured, lets call it "payload", then MQTT Engine will convert each token in the topic to a folder and create a tag called "payload" with the value "12345"

Ignition - Ignition Gateway

localhost:8088/main/web/config/mqttengine.settings?31

Search

Ignition
by inductive automation

[HOME](#)[STATUS](#)[CONFIGURE](#)

[USER MANUAL](#)[SUPPORT](#)

adminSign Out

Launch Designer

Search...

SYSTEM

Overview

Backup/Restore

Licensing

Modules

Projects

Redundancy

Gateway Settings

NETWORKING

Gateway Network

Email Settings

SECURITY

Auditing

Users, Roles

Service Security

Security Zones

DATABASES

Connections

Drivers

Store and Forward

ALARMING

General

Journal

Notification

On-Call Rosters

Schedules

TAGS

History

Trial Version1:43:09

We're glad you're test driving our software. Have fun.

Activate Ignition

MQTT Engine Settings

GeneralServersNamespaces


DefaultCustom

Successfully updated Custom Namespace "New Namespace Name"

Name	Subscriptions	Root Tag Folder	Tag Name	JSON Payload	
New Namespace Name	test/#		payload	false	deleteedit

Create new Custom Namespace...

Note: For additional details on configuring MQTT Engine, see the documentation [here](#)

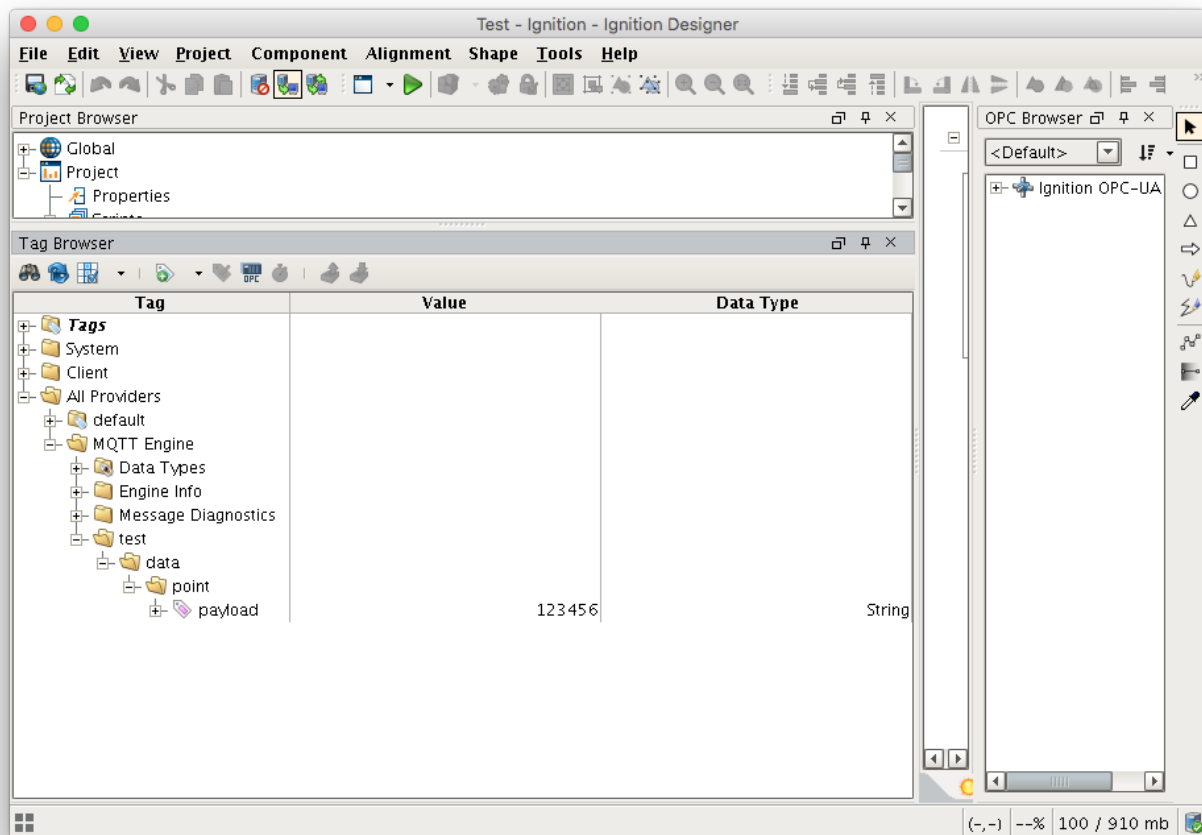

In most cases it is useful to specify a Tag Name in order to prevent cases when a publish on a topic can overwrite a previously created tag, changing it into a folder. Consider the case where you have the following two publishes:

1st publish on topic "one/two" will create a tag named "two" in the folder "one"

2nd publish on topic "one/two/three" will create a tag named "three" in the folder "one/two"

When the 2nd publish is received it will overwrite the first tag because "two" is now a folder instead of a tag. This folder/tag name collision can be avoided by specifying the Tag Name to always use for tags.

Custom Namespace JSON Example

Let say we have a publish received on the topic "test/data/json" with value '{ "stringTag" : "12345", "folderTag" : { "intTag" : 1, "boolTag" : true } }'. MQTT Engine will create a three folders "test", "data" and "point" followed by a tag/folder structure representing the JSON value of the payload.

Ignition - Ignition Gateway

localhost:8088/main/web/config/mqttengine.settings?35

Search

USER MANUALSUPPORTadminSign OutLaunch Designer

Ignition
by inductive automation

HOMESTATUSCONFIGURE

Search...

SYSTEM
Overview
Backup/Restore
Licensing
Modules
Projects
Redundancy
Gateway Settings

NETWORKING
Gateway Network
Email Settings

SECURITY
Auditing
Users, Roles
Service Security
Security Zones

DATABASES
Connections
Drivers
Store and Forward

ALARMING
General
Journal
Notification
On-Call Rosters
Schedules

TAGS
History

Trial Version 1:39:17 We're glad you're test driving our software. Have fun. [Activate Ignition](#)

MQTT Engine Settings

GeneralServersNamespaces

DefaultCustom

Successfully updated Custom Namespace "New Namespace Name"

Name	Subscriptions	Root Tag Folder	Tag Name	JSON Payload	
New Namespace Name	test/#			true	delete edit

[→ Create new Custom Namespace...](#)

Note: For additional details on configuring MQTT Engine, see the documentation [here](#)

