

# EFM Export Configuration

The EFM Export module provides a configuration section to the Ignition Gateway that can be seen in the Configure section of the Ignition Gateway web UI. There is one configuration page - EFM Export Settings.

## General

These are the general EFM Export configuration settings.

## Main

- **Enabled**
  - This denotes whether to enable or disable the EFM Export module.
- **Datasource**
  - A dropdown list to select the Flow-Cal database connection to use. This list is populated with the database connections set up within the Ignition Gateway.

The screenshot displays the Ignition Gateway web interface. The browser address bar shows the URL `localhost:8088/main/web/config/efmexport.settings?5`. The page features a dark blue header with the Ignition logo and navigation links for HOME, STATUS, and CONFIGURE. A green banner at the top indicates a 'Trial Version' and provides a link to 'Activate Ignition'. The left sidebar contains a search bar and a list of system categories: SYSTEM, NETWORKING, SECURITY, DATABASES, and ALARMING, each with sub-links. The main content area is titled 'EFM Export Settings' and includes a 'General' tab. Under the 'General Settings' section, there is a 'Main' configuration table with two rows: 'Enabled' (checked) and 'Datasource' (set to '- none -'). A 'Save Changes' button is located at the bottom right of the configuration area. A note at the bottom states: 'Note: For additional details on configuring EFM Export, see the documentation [here](#)'.

Main	
Enabled	<input checked="" type="checkbox"/> Enable the EFM Export module
Datasource	<div>- none -</div> <div>The Datasource to use for storage</div>